

CAUTION:

- 1) DO NOT USE THIS MACHINE WITHOUT FIRST READING THE SAFETY INSTRUCTIONS PROVIDED WITH THE MACHINE
- 2) DO NOT PICK UP GLASS, WAX OR METAL
- 3) DO NOT PUT HANDS OR OTHER OBJECTS IN OR AROUND INLET
- 4) DO NOT GET OUT OR BREAK THE SAFETY NET BY THE NET
- 5) DO NOT DISCONNECT THE POWER BEFORE CLEARING THE SAFETY NET
- 6) DO NOT POWER ON THE MACHINE BEFORE TURNING THE START OR CONNECTOR


POWER	1HP	PHASE	1
VOLT	230V	Hz	50
AMP	4.8A	CLASS	B
	2950	SER	



CAUTION:

- (1) DO NOT USE THIS MACHINE WITHOUT FIRST READING THE SAFETY INSTRUCTIONS PROVIDED WITH THE MACHINE.
- (2) DO NOT PICK UP GLASS WATER OR METAL IN OR AROUND INLET.
- (3) DO NOT PUT HANDS OR OTHER OBJECTS IN THE INLET.
- (4) DO NOT CUT OR BREAK THE SAFETY NET.
- (5) DO NOT DISCONNECT THE POWER BEFORE CLEANING THE SAFETY NET.
- (6) DO NOT POWER ON THE MACHINE BEFORE FIRING THE JOINT OR CONNECTOR.

ENER	1HF	PHASE	1
LT	230	HZ	50
P	4.8	CLASS	B
PM	295	ER	

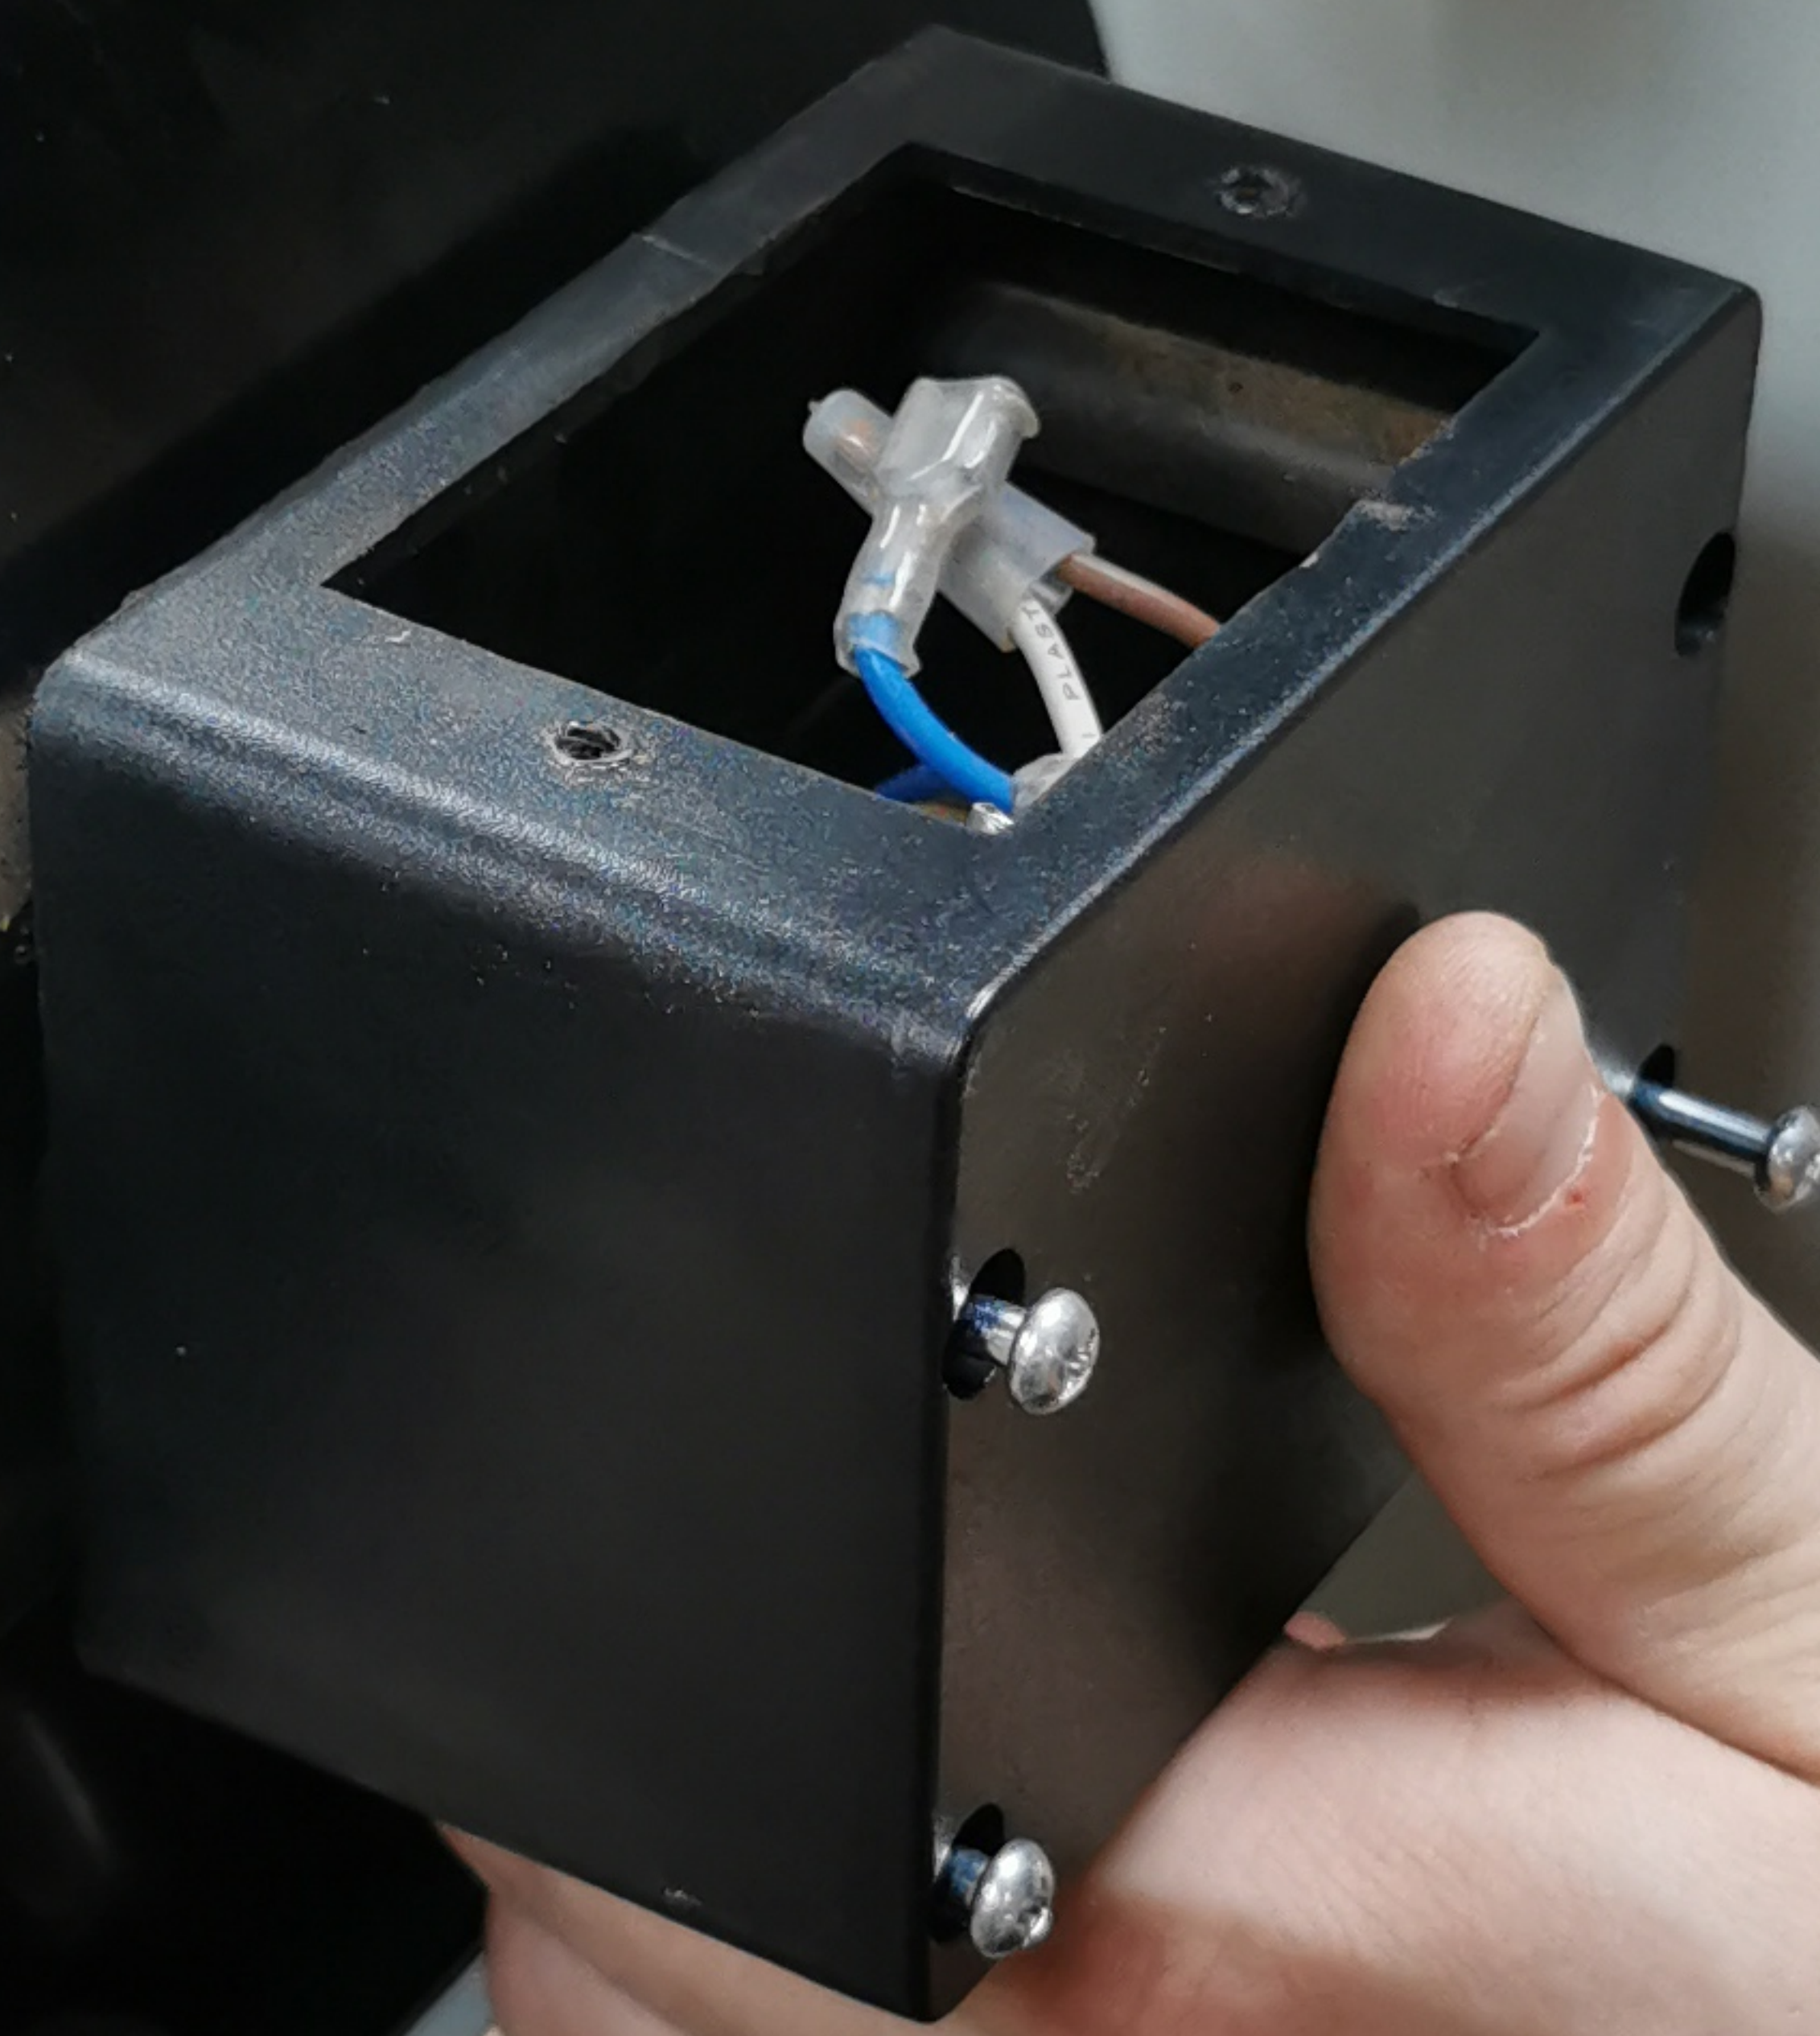


CAUTION:


- (1) DO NOT USE THIS MACHINE WITHOUT FIRST READING THE SAFETY INSTRUCTIONS PROVIDED WITH THE MACHINE.
- (2) DO NOT PICK UP GLASS, WATER OR METAL
- (3) DO NOT PUT HANDS OR OTHER OBJECTS IN OR AROUND INLET
- (4) DO NOT CUT OR BREAK THE SAFETY NET IN THE INLET
- (5) DO DISCONNECT THE POWER BEFORE CLEANING THE SAFETY NET
- (6) DO NOT POWER ON THE MACHINE BEFORE FIXING THE JOINT OR CONNECTOR

POWER	1HP	PHASE	1
VOLT	230V	HZ	50
AMP	4.8A	CLASS	B
R. M.	2950	SER	



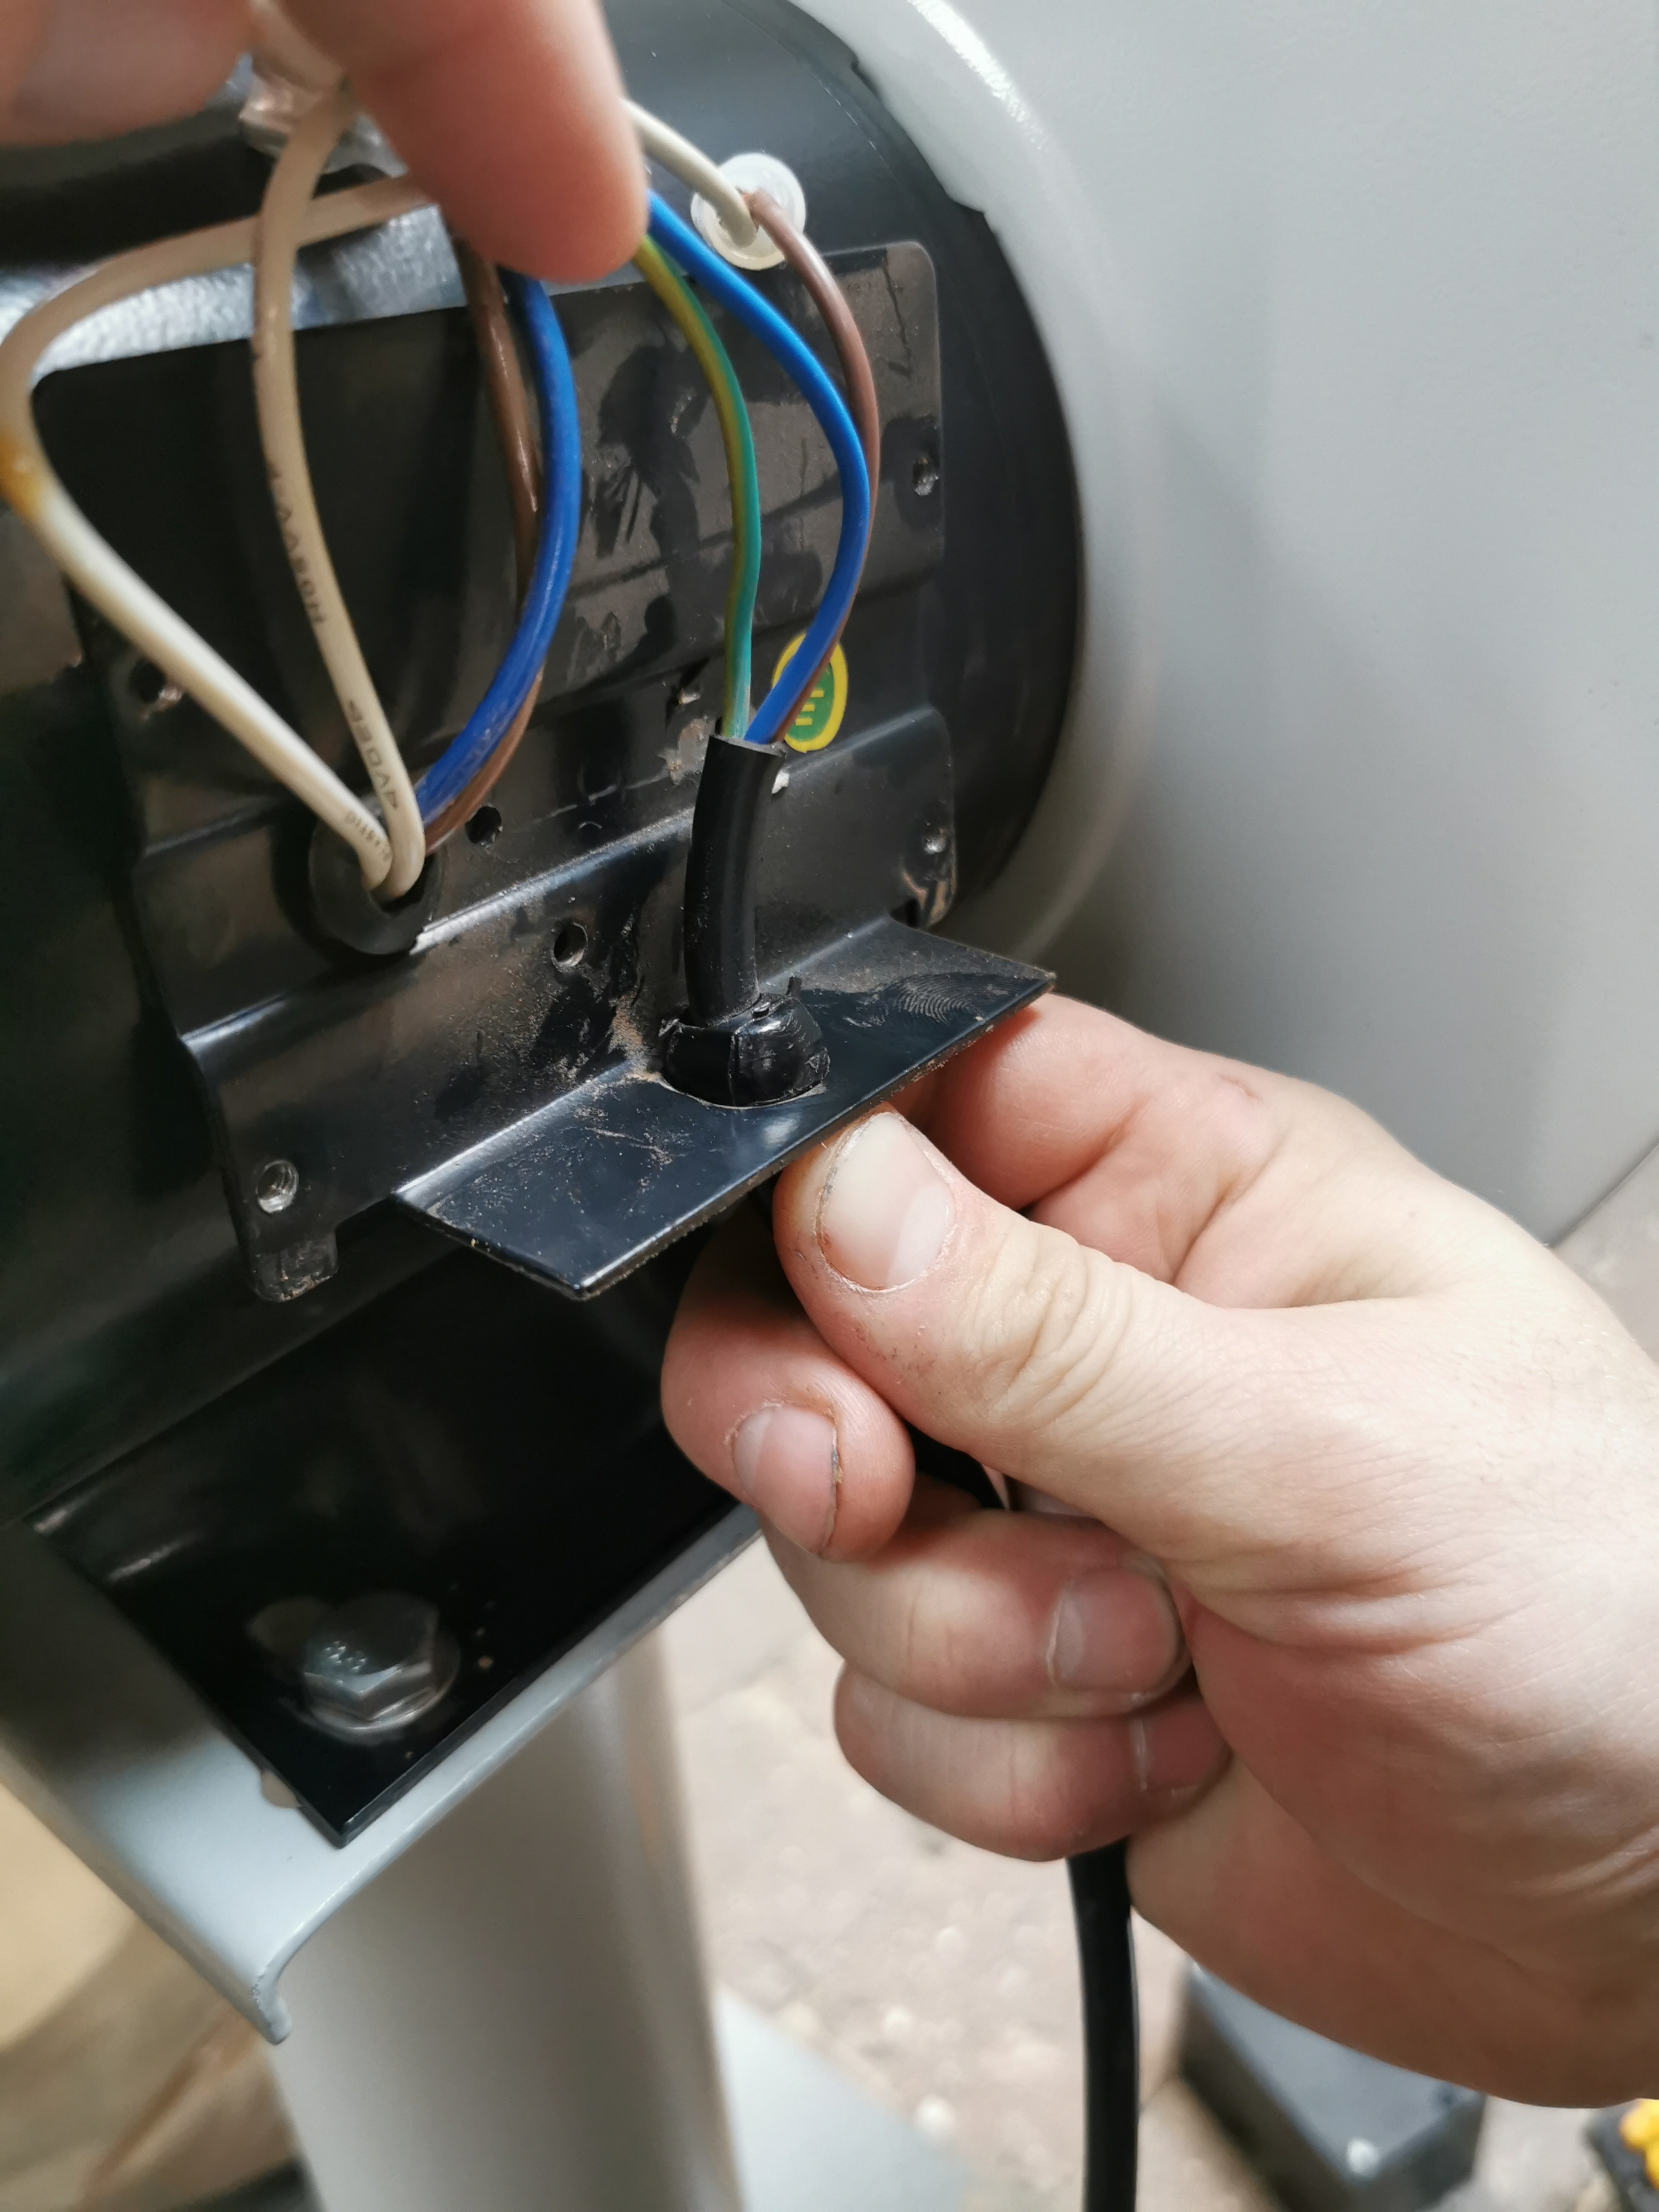



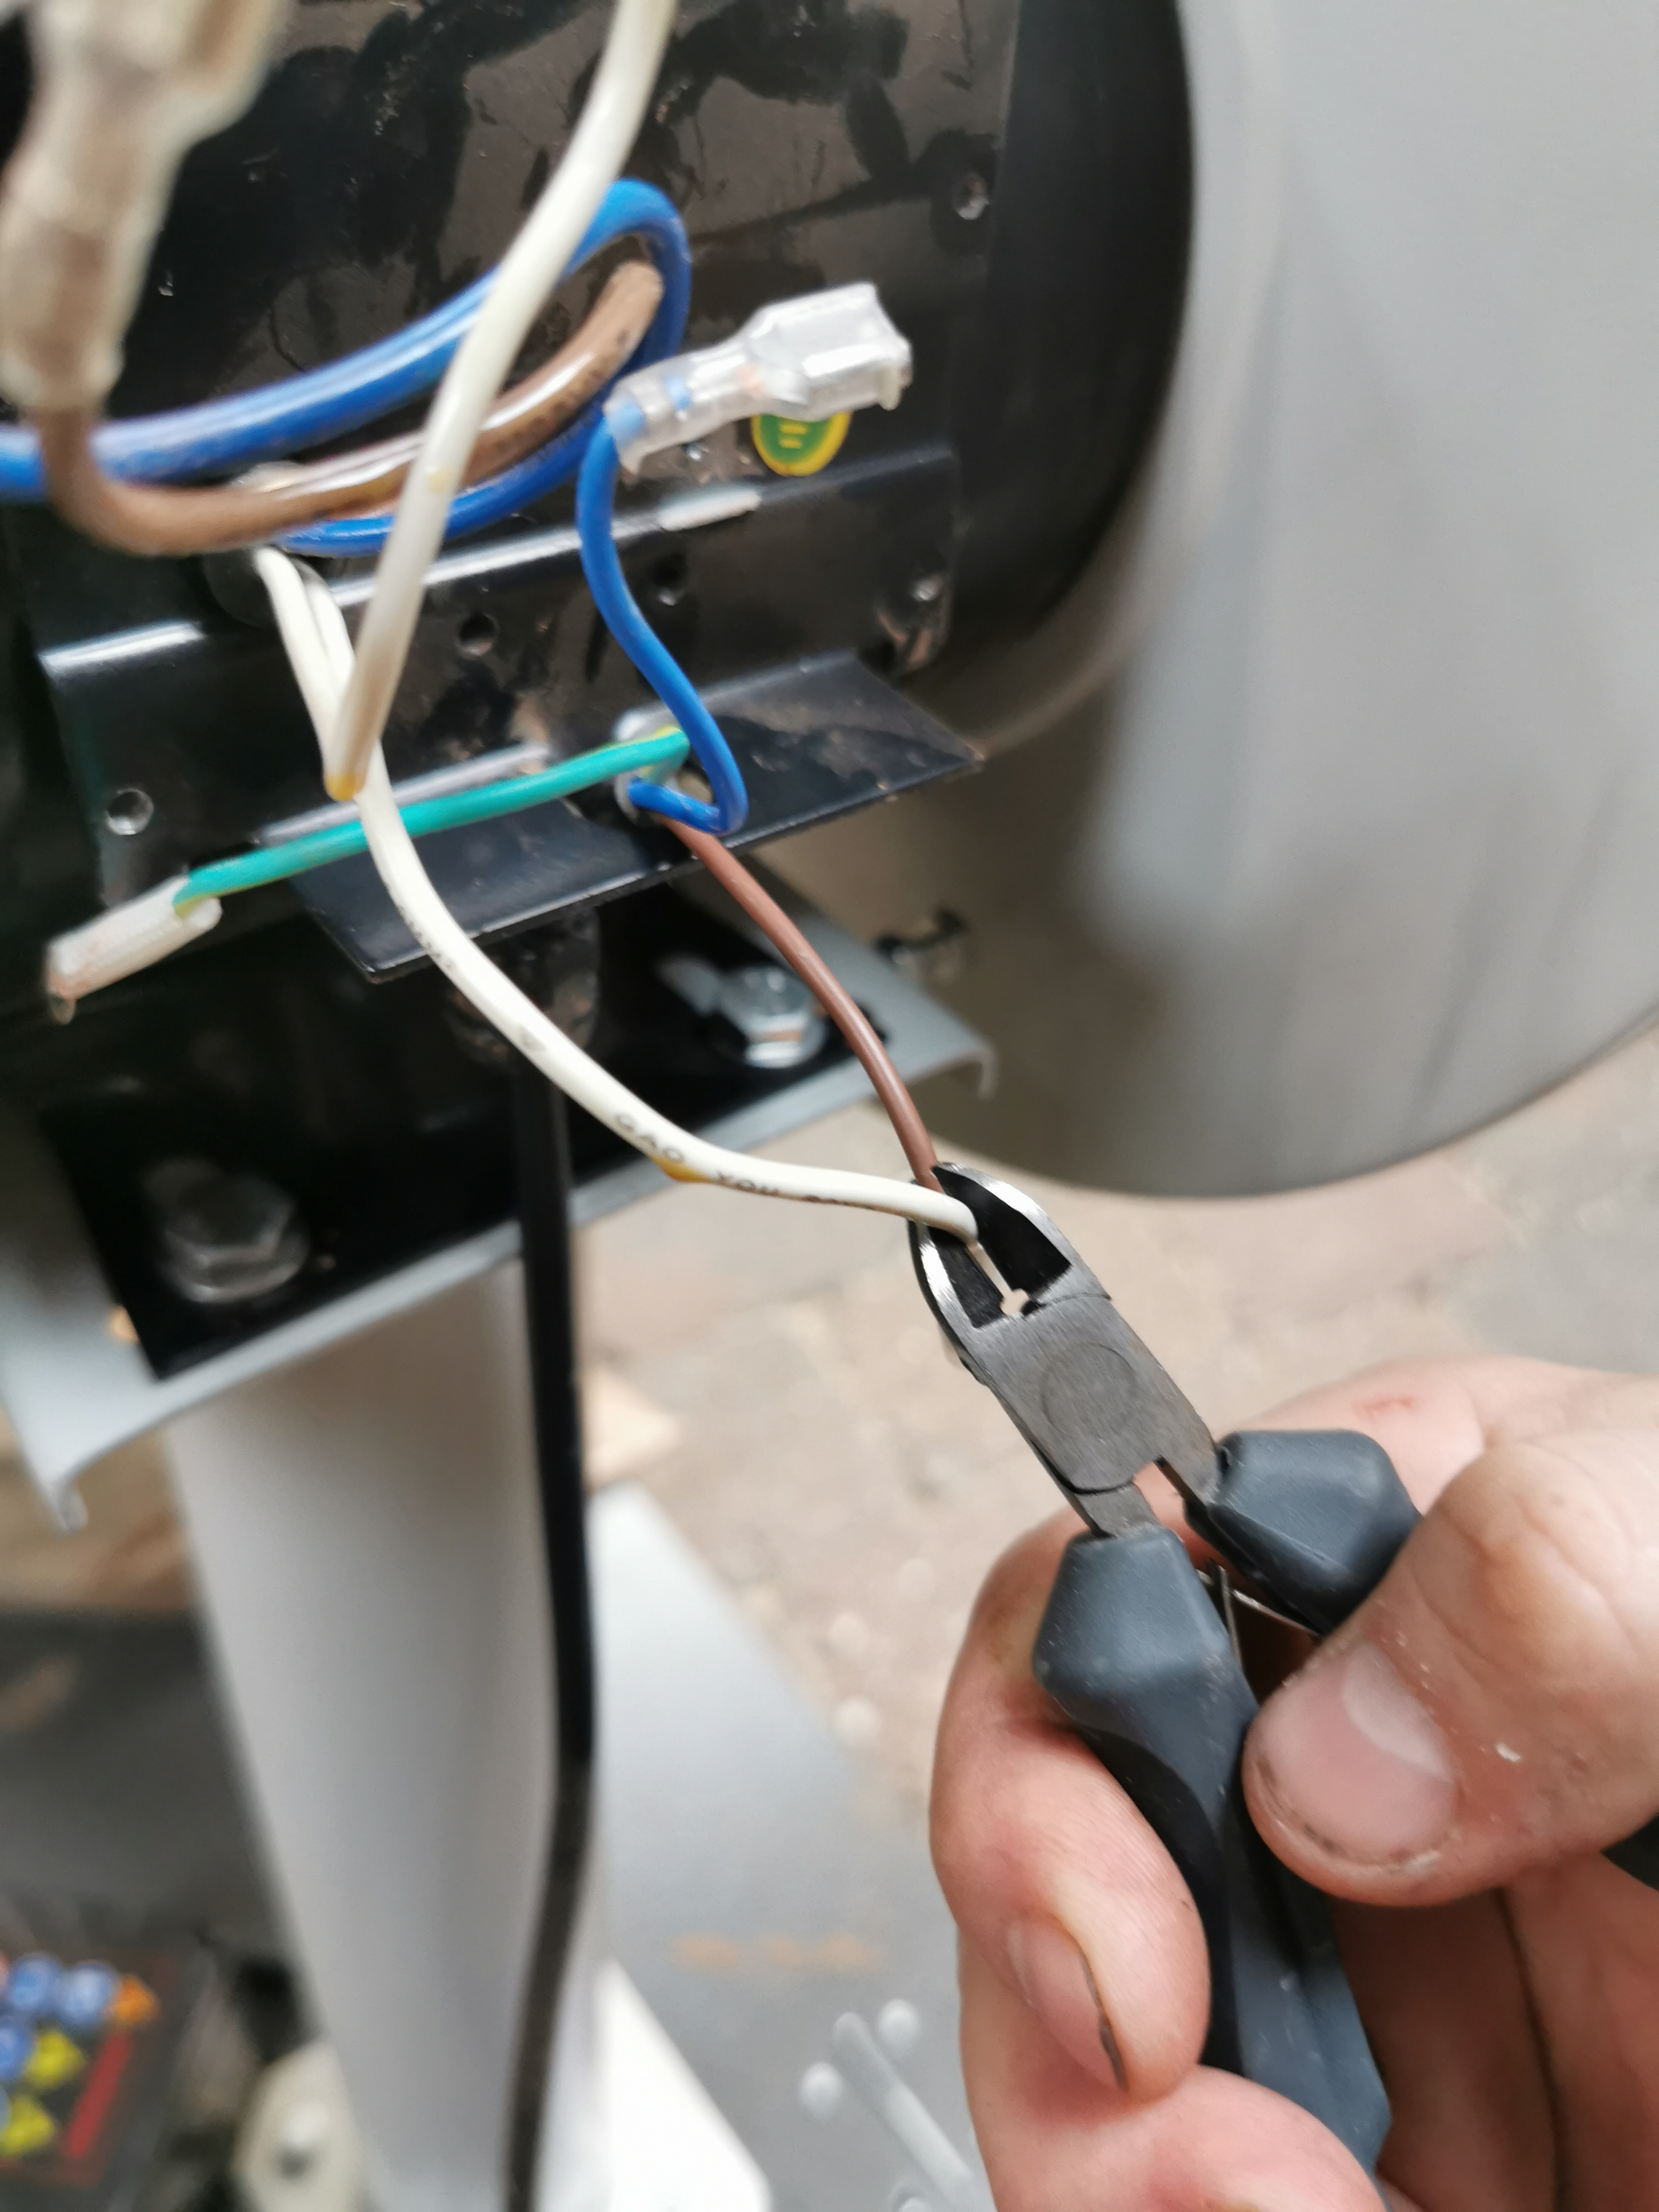

DUST EXTRACTOR
ELECTRICAL CONTROL BOX

WARNING



8

ON


TIME

OFF


CHECKED
Model No. FM220
Serial No. 18CN-000
Voltage 230V/50Hz
Date 2016-12


POWER
VOLT
AMP
R.P.M.



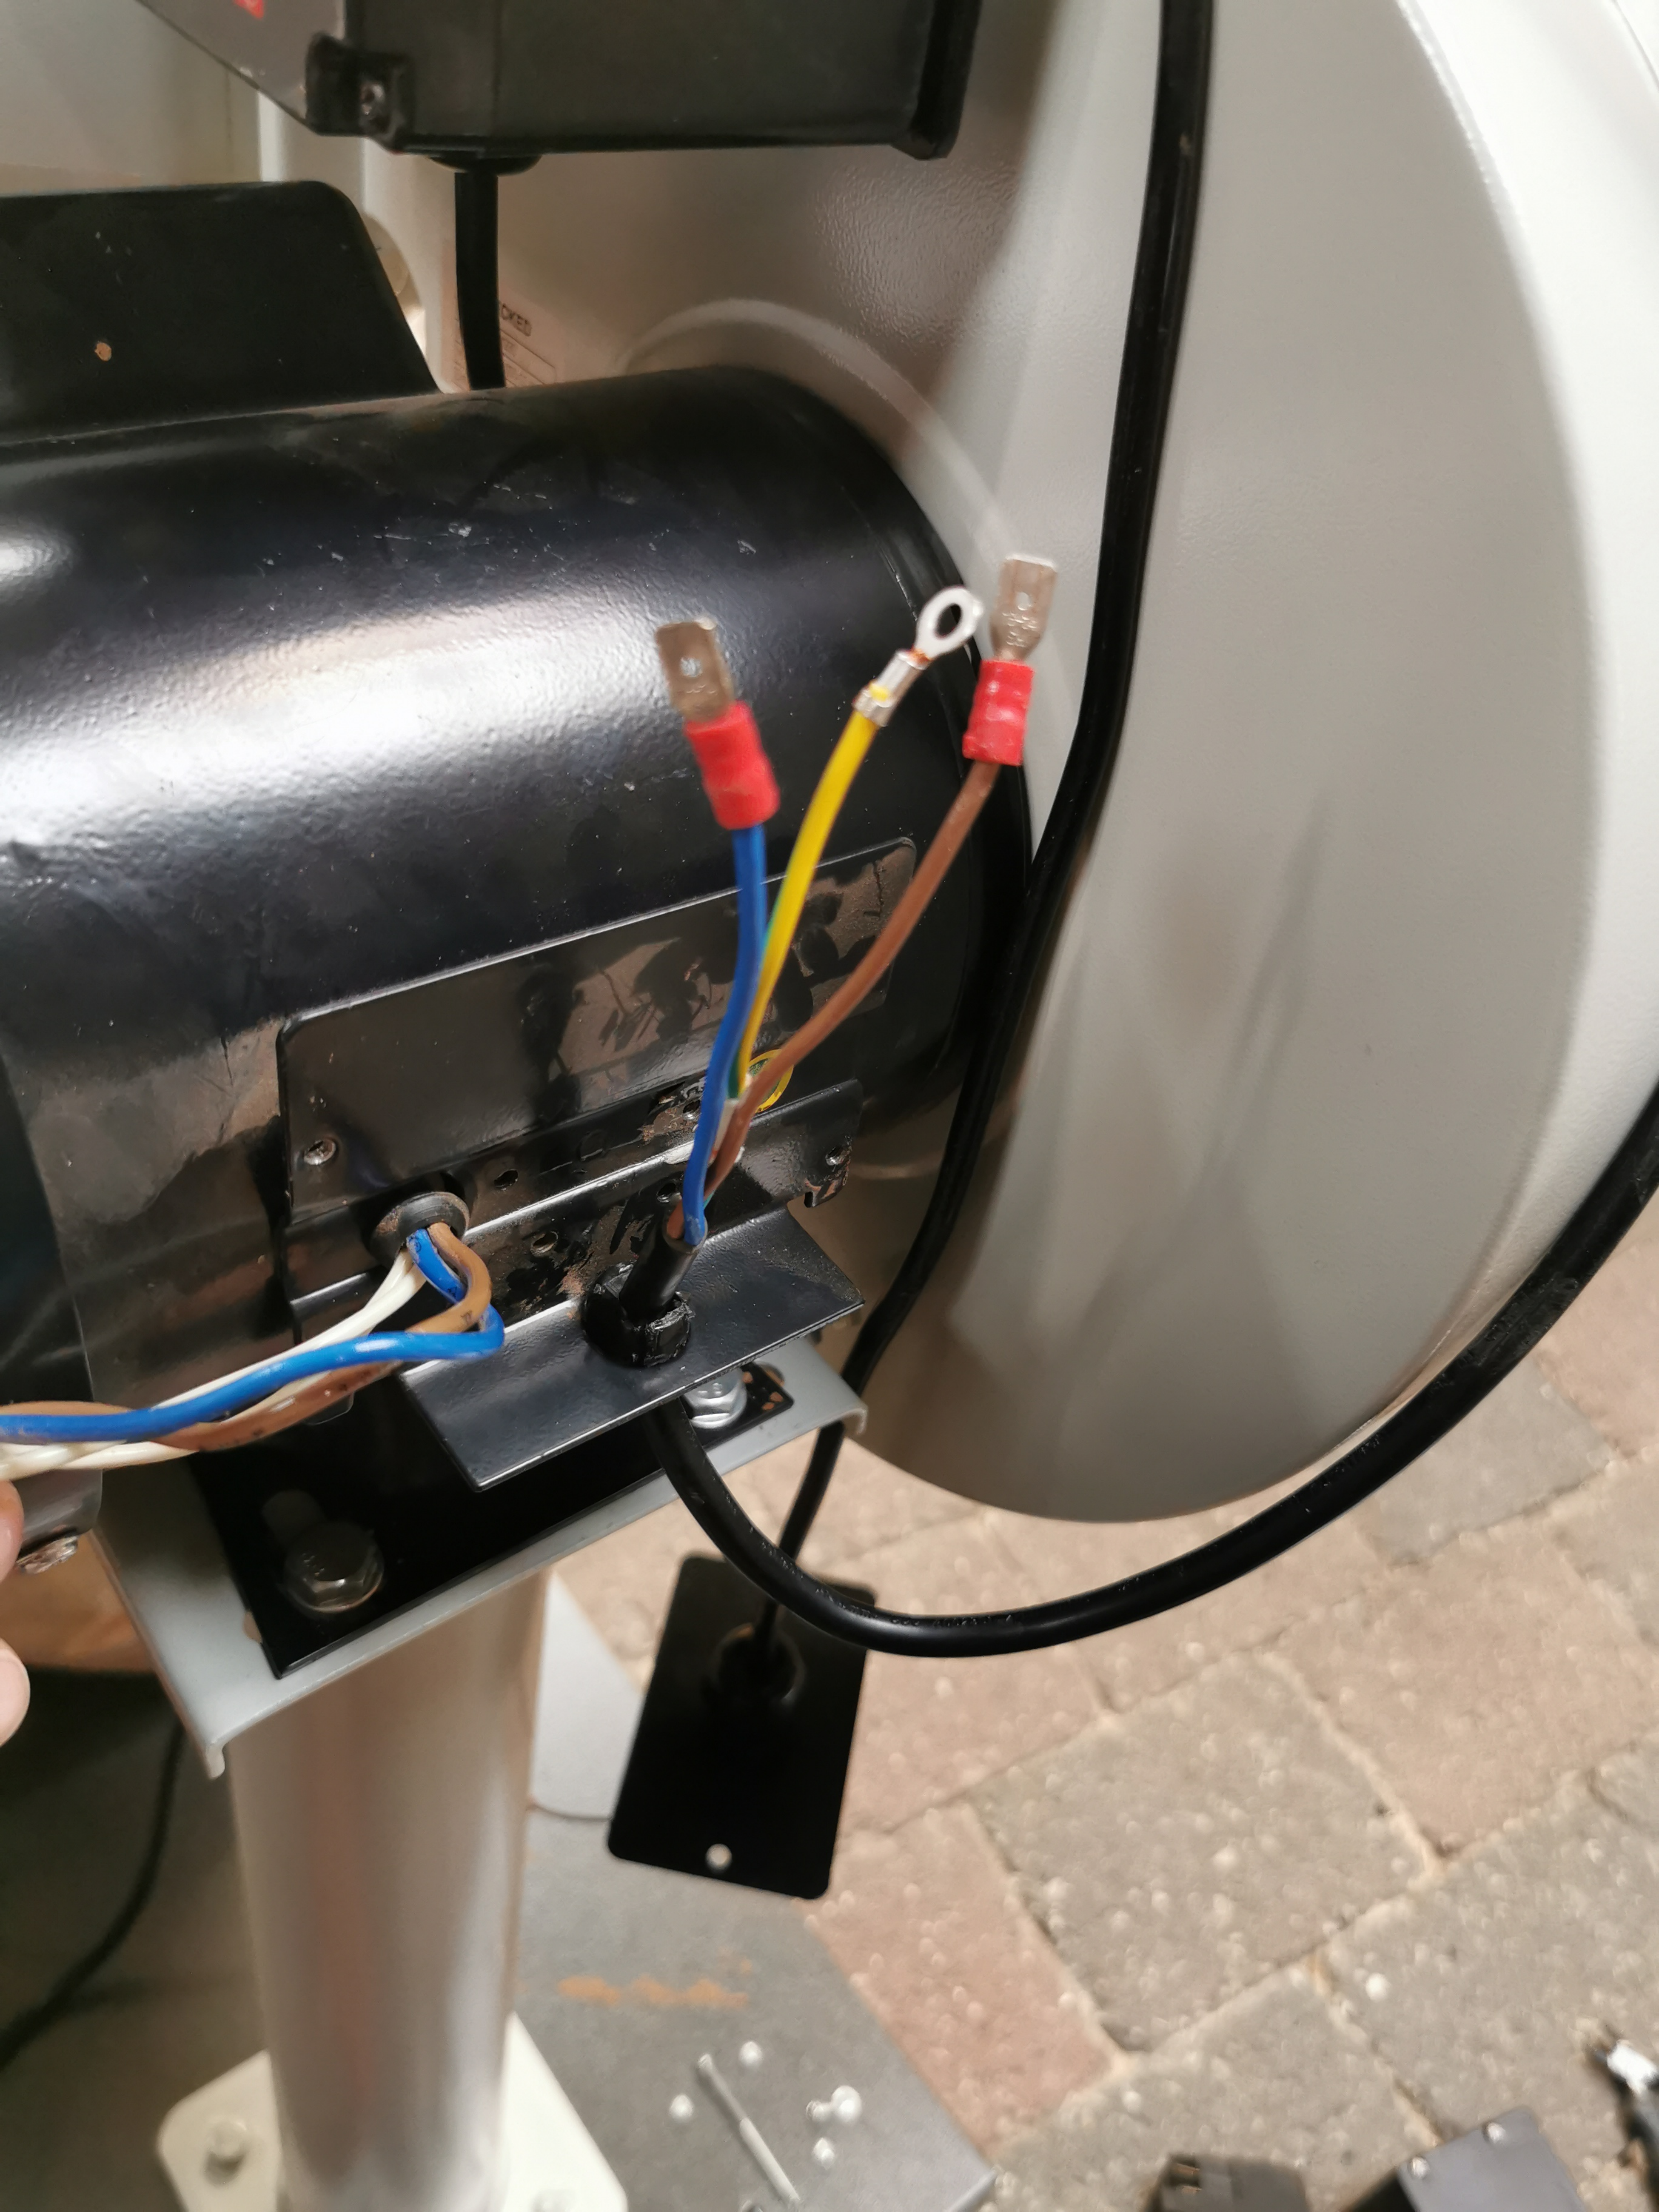

1HP	230V	8/
PHASE	Hz	
CLASS	50	1
SER	B	

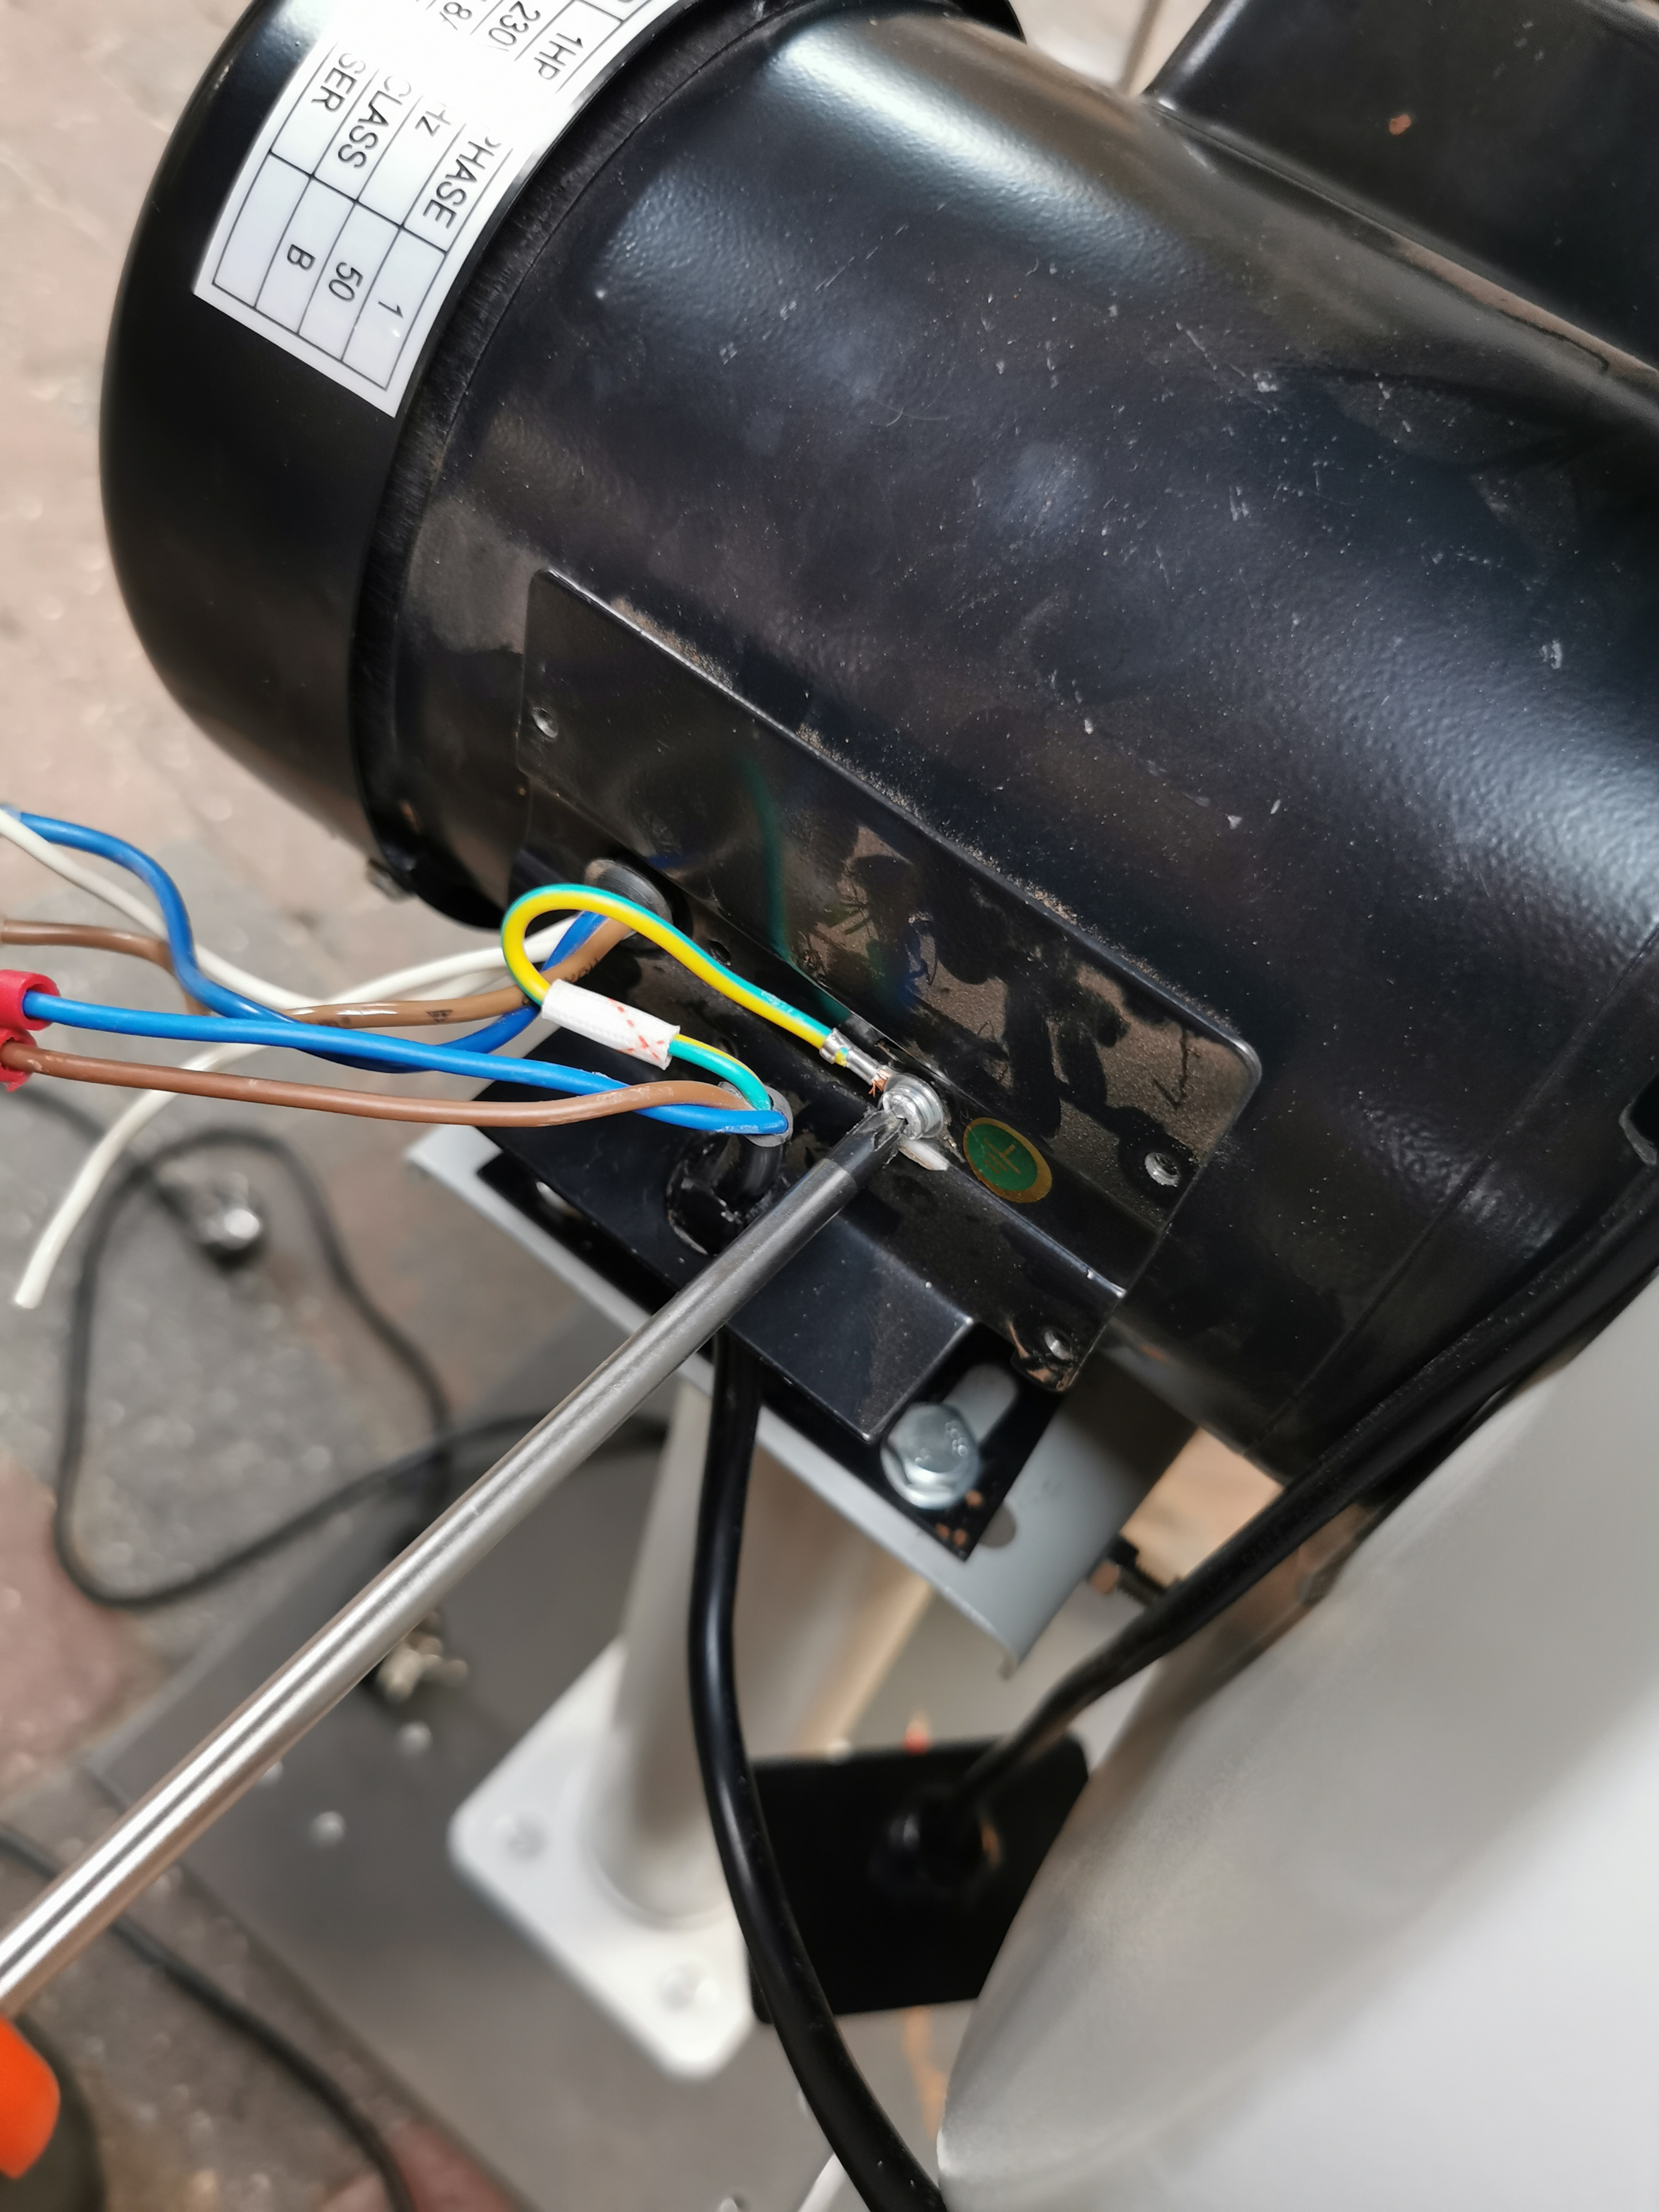

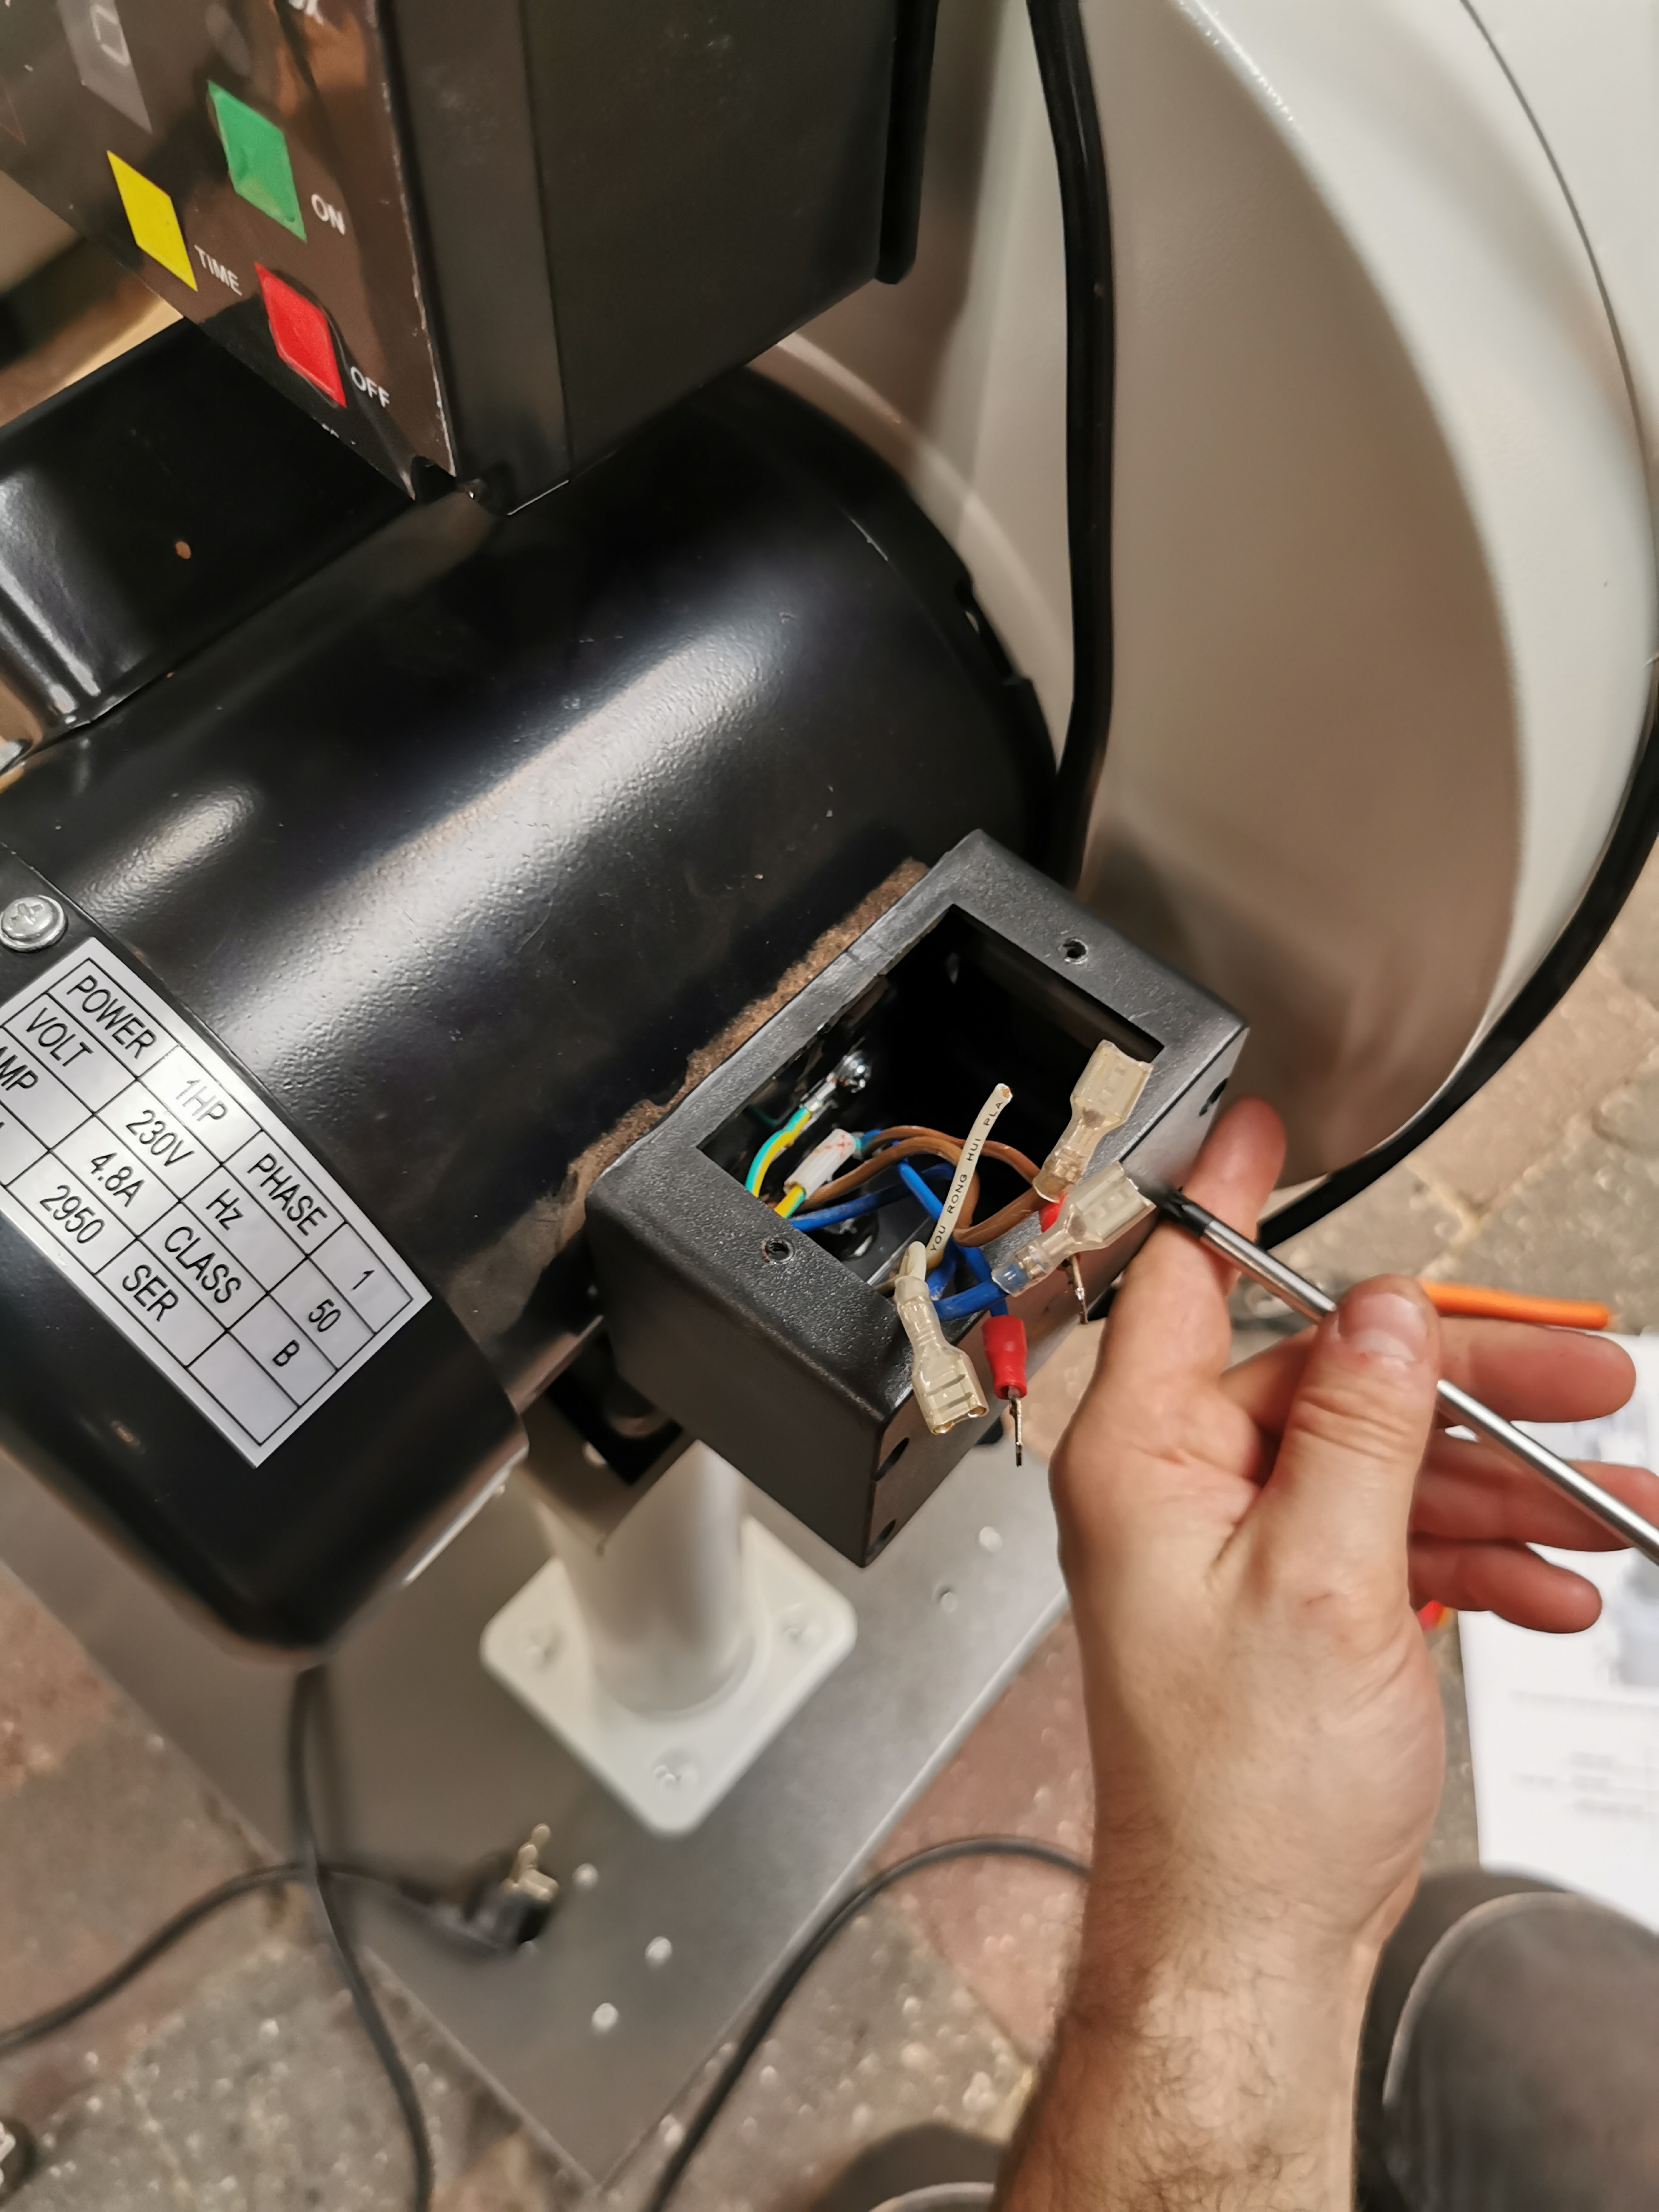


POWER	1HP	PHASE	1
VOLT	230V	HZ	50
CURRENT	4.8A	CLASS	B
SERIAL	2950	SER	

ASE	1
50	
B	





POWER			
VOLT	1HP	PHASE	
AMP	230V		
R.P.M.	4.84	HZ	1
	2950	CLASS	50
		SER	B

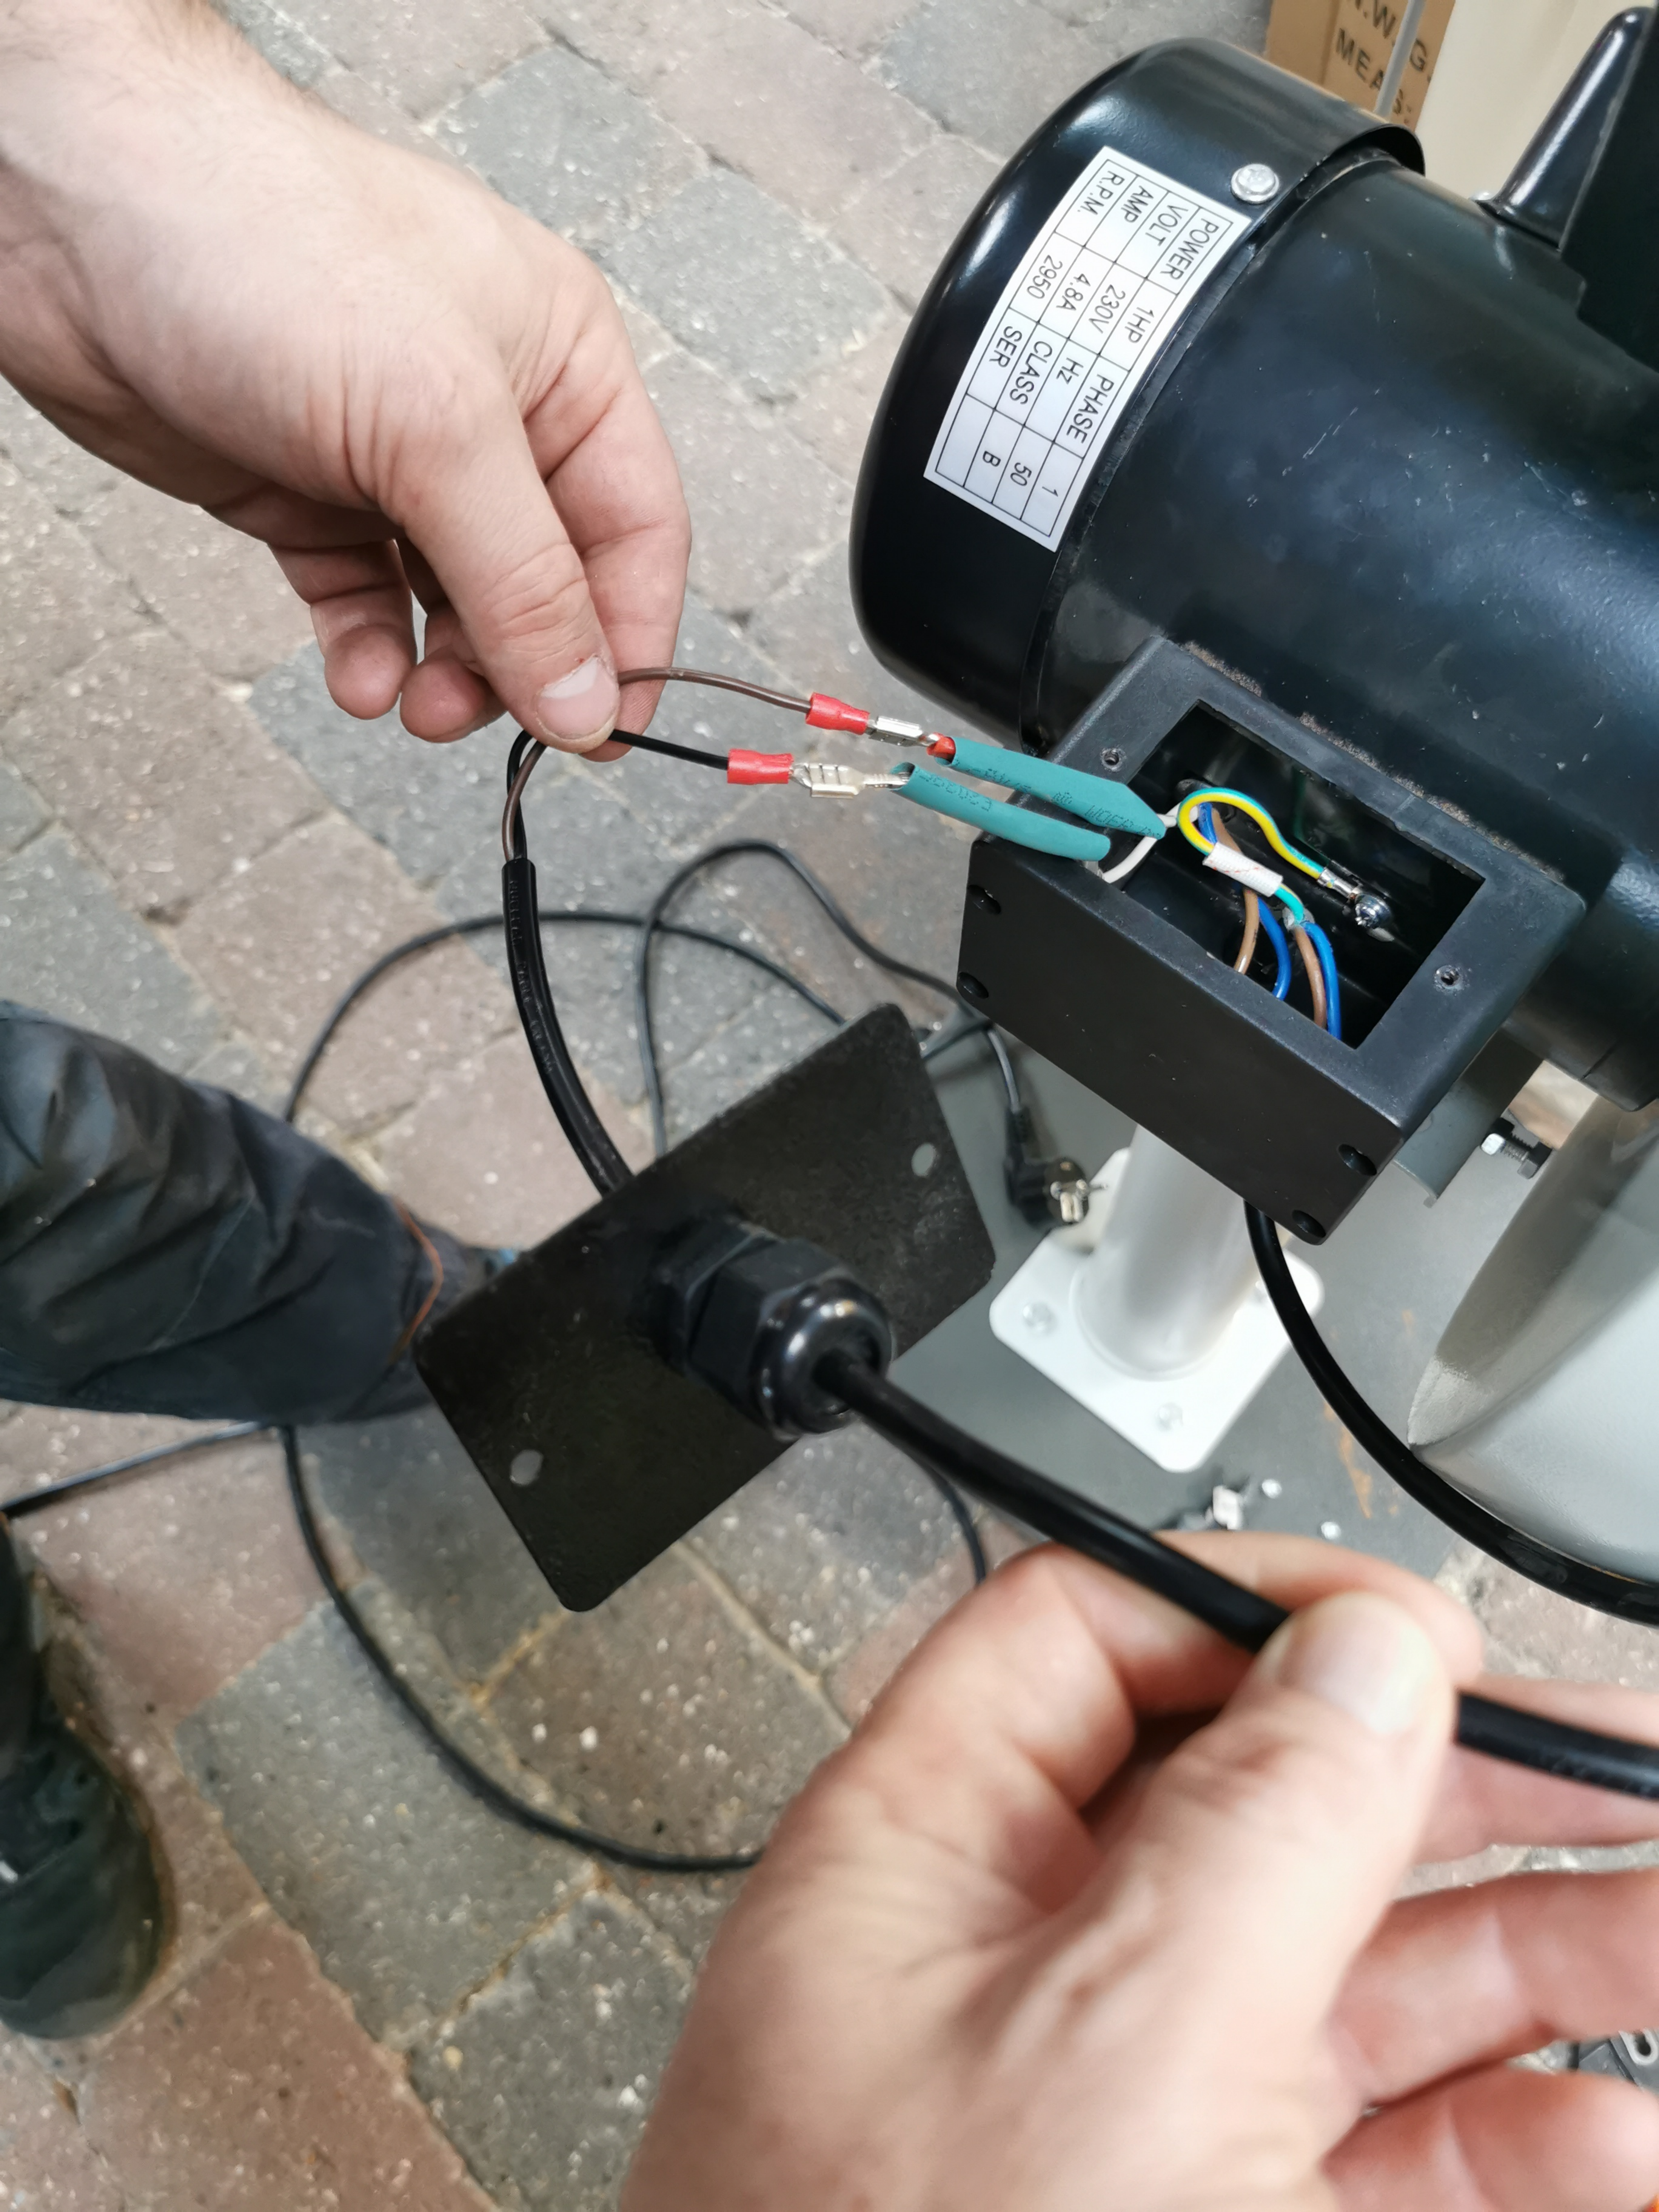

R.P.M.	AMP	VOLT	POWER
2850	4.8A	230V	1HP
SER	CLASS	Hz	PHASE
B	B	50	1

